


# Accessories



## Comparison of Transmittable Torque at Ø 20 mm

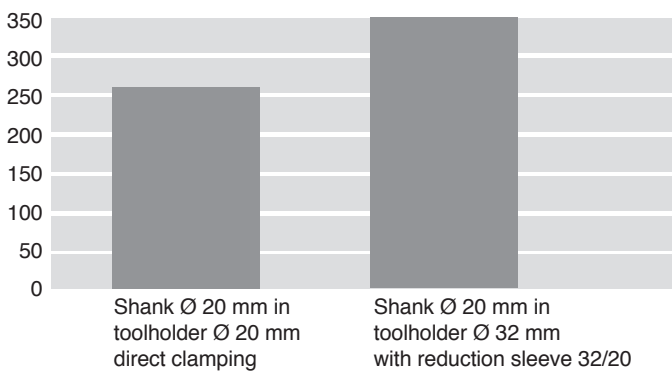

## HYDRO-GRIP Torque wrench

Use torque wrench to ensure correct tightening independent on user. Should be used with all HYDRO-GRIP® holders.

Torque: 6 Nm:

HYDRO-GRIP, HYDRO-GRIP PENCIL, ECOGRIP.


Torque: 10 Nm:

HYDRO-GRIP HD, HYDRO-FIX.



## Extractor

Item description	Part no.	For Sizes	A	B
			[mm]	[mm]
● EHS 12 - 1/2"	E7321.12000	HS 12	24.6	100
● EHS 20 - 3/4"	E7321.20000	HS 20	38.0	160
● EHS 25 - 1"	E7321.25000	HS 25	51.0	180
● EHS 32 - 1 1/4"	E7321.32000	HS 32	63.0	200

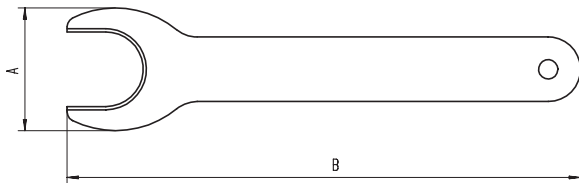

The extractor helps to remove the reduction sleeve from the toolholder.

Item description	Tightening torque:	Part no.
● HYDRO-GRIP Torque wrench	6 Nm	19050
● HYDRO-GRIP HD Torque wrench	10 Nm	19052
● HYDRO-FIX Torque wrench	10 Nm	19053

- ! Improper assembly can damage the concentricity of the reduction sleeve.
- ! Insert tools the full length of the reduction sleeve.
- ! Tool shank h6 or h7 can be used.
- ! Do not clamp reduction sleeve without a tool. Reduction Sleeve will be damaged.

